



CODE	DESCRIPTION
SP1263+color	Aerator
SP3756+color	Spout
SP3817+color	Fixing Nut
SP1239	O-ring kit
SP3818-H(Hot) / C (Cold)+color	Hot/Cold Handle
SP3794+H (Hot) / C (Cold)	Valve
SP3733+color	Plinth
SP3311	Fixing Kit
SP4158	Flexi-Tails

In the unlikely event you find a part missing please contact Highway Wholesalers Ltd.  
On 051 872615 for immediate dispatch of part.

### Maintenance:

If the fitting begins to drip:

- 1) Turn off the water supply
- 2) Loosen grub screw under handle lever, remove handle and valve
- 3) Carefully clean seating, rubber washer and ceramic disc.
- 4) Replace valve and handle, then turn on the water supply.
- 5) If problem persists contact our help line quoting the product code.

Where an aerator is fitted to the outlet of the spout, it will need occasional cleaning. This will be evident when the water flow slows down to an unacceptable level. To accomplish this unscrew the outlet in an anti-clockwise direction and remove the mesh. Immerse the mesh in a suitable descaling fluid overnight, rinse thoroughly in clean water and re-install.

### Remember:

Maximum water supply pressure: 75 PSI (5 bar)  
Maximum hot-water supply temperature: 70 °C  
Recommended hot-water supply temperature: 65 °C

If these temperatures or water pressure are exceeded damage to the tap can result. A pressure reducing valve may be required to be fitted in high water pressure situations.

**Please read these instructions before you install and use the tap.** All designs, descriptions and dimensions are subject to change without notice.

### Preparation

Flush the plumbing system before installing the mixer tap. This is to avoid plumbing residues clogging the mesh of the aerated outlet, or possibly damaging the valve's washers. This is especially important where extensive plumbing work has been carried out.

First shut off your water heating system then, with your mains stop cock closed, open the lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes are empty. (The hot water storage cylinder always remains full).

### Installation

- First screw the threaded stud into the mixer body. Screw the flexi-tails into the mixer body, and fully hand tighten.
- Pass the base plinth and rubber washer over the flexi-tails and threaded stud to form a seal on sink top.
- Pass the flexi-tails and fixing stud through the sink top from above, and place the mixer in position on the sink with the cold (normally) on the right hand side.
- Slide the retaining plate up the flexi-tails positioning the retaining plate's raised side upwards and secure screwing the fixing nut finger tight. Check that the mixer body is correctly positioned and fully tighten fixing nut.
- Hot water should be connected to the left when viewed from the front.
- Having first checked all new connections, turn on the mains stop cock, close all taps except the new mixer and as the system starts to refill check for leaks.