

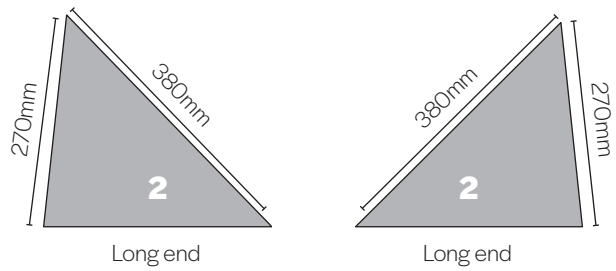
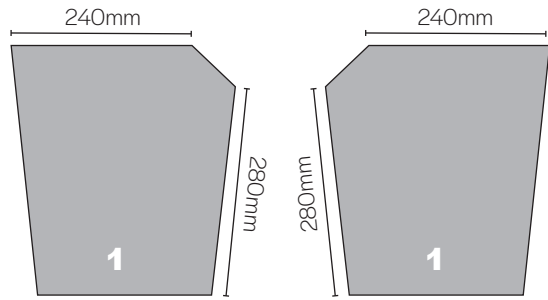
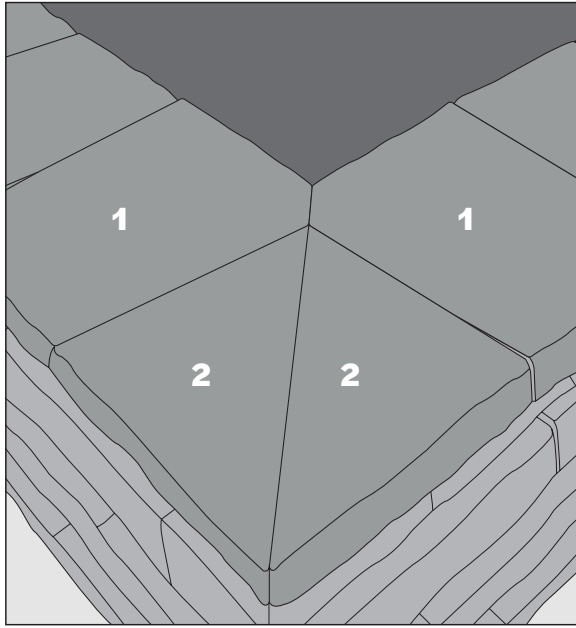
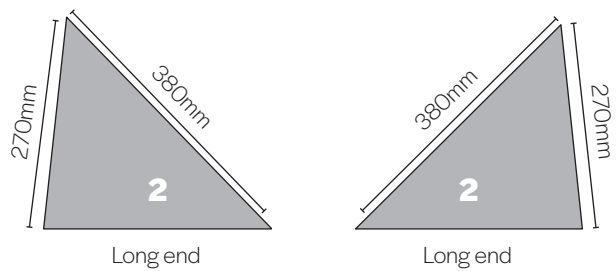


HOW TO INSTALL INTERNAL & EXTERNAL 90 DEGREE CORNER COPING BLOCKS

Installing **External** 90 degree corner coping blocks.

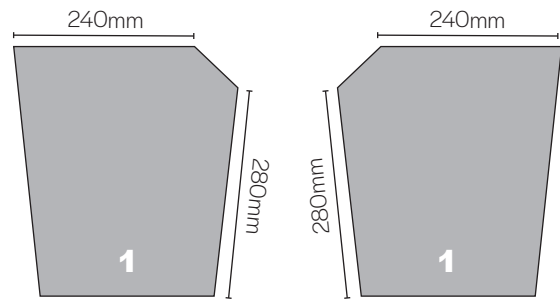

Installing **Internal** 90 degree corner coping blocks.

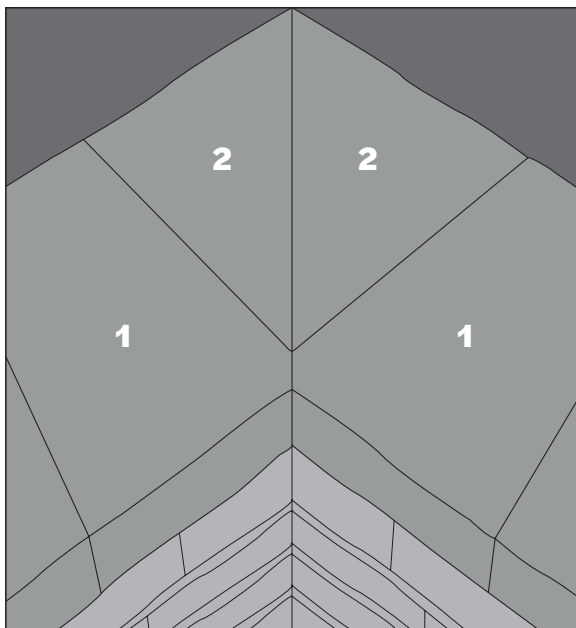

Secure the corner copings in place using a high quality exterior grade construction adhesive such as CT1 Power N Grab bond, Loctite Fast Grab Premium, Soudal Fix All - High Tack or equivalents.